

ARGONAUT

DIVERTER TRIM INSTALLATION


Model #:
AG231-1



BEFORE YOU BEGIN YOUR INSTALLATION:



Turn off water supply.

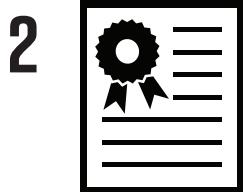

Observe all local
plumbing codes.



Inspect plumbing for signs of
damage. Replace as necessary.



DO NOT use petroleum based
products on this faucet.

REQUIRED TOOLS AND MATERIALS:



Flat Screwdriver



Adjustable Wrench



Channel Locks



Coping Saw

WARNING: Cancer and reproductive harm - see www.P65Warnings.ca.gov

IMPORTANT!

- Read these instructions and plan the installation before beginning.
- Risk of product damage. Do not apply direct heat to the valve. Excessive heat will damage the plastic components and plaster guard.
- Do not remove the plaster guard until instructed to do so.
- A water supply is required for this valve.
- Component location, spacing, and situational requirements can vary.

