

# RAINSTONE


RS256-7, RS256-8

## PAINTSTONE INSTALLATION GUIDE


Model #:  
RS256-7



Model #:  
RS256-8

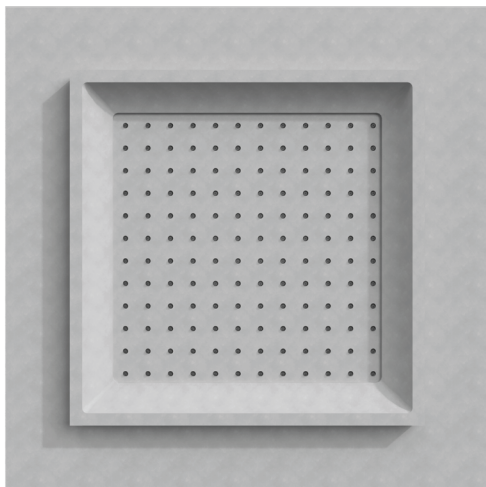


1.

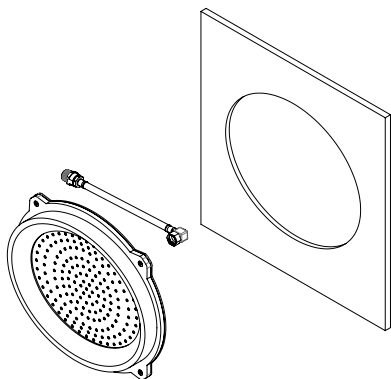


Gently Remove all items from Paintstone packaging

2.

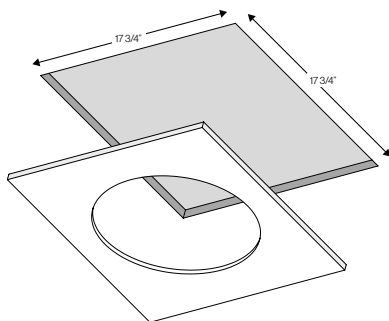

Create hole in ceiling with same dimensions as external frame (17-3/4")


\*

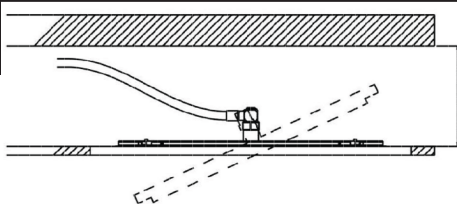

min. 4" (RS256-7)


min. 5.5" (RS256-8)

3.

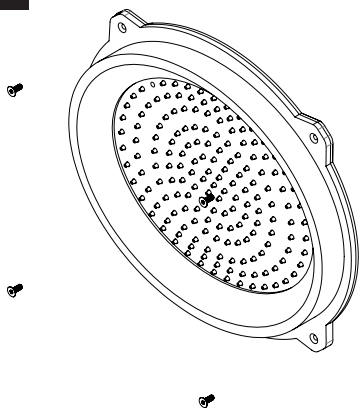


Using provided allen key, remove screws from internal assembly

4.

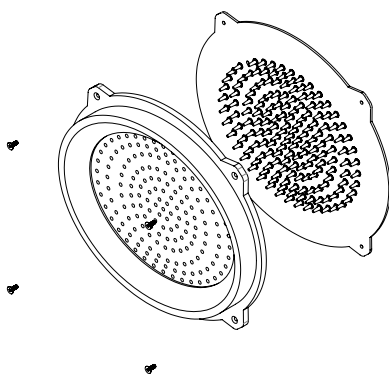


Separate Paintable portion of Paintstone from metal backing and nozzles

5.

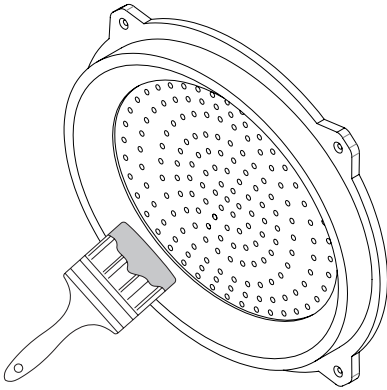


Paint internal paintable portion as desired and allow to dry

6.

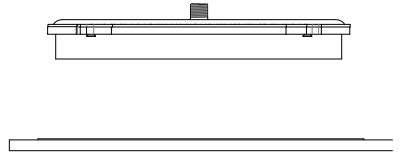


Realign metal backing, nozzles and paintable internal frame and position flathead screws in corresponding hole

7.

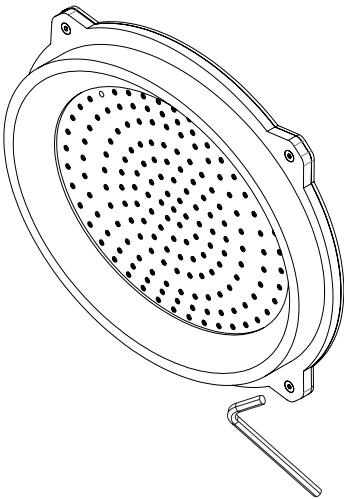


Using allen key, reassemble internal assembly by screwing flathead screws back into original positioning

8.

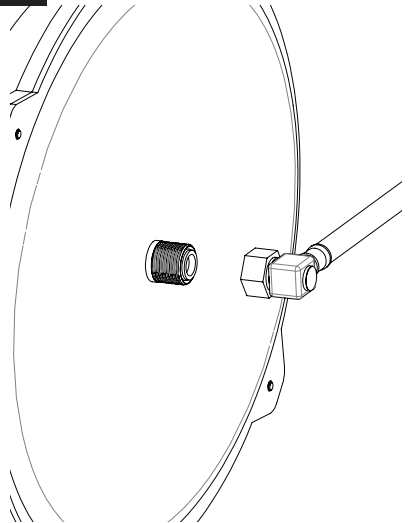


Align Hose with threads on metal back of internal assembly connecting to check valve

9.

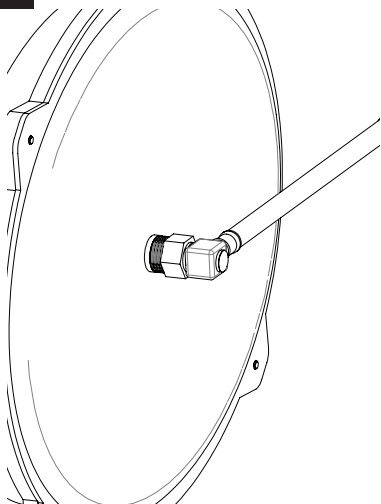


Tighten hose onto back of shower head

10.

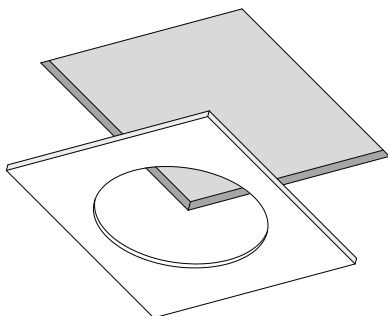


Align frame **WITHOUT** internal assembly in hole and secure with wall screws(not provided) to secure frame in ceiling

11.

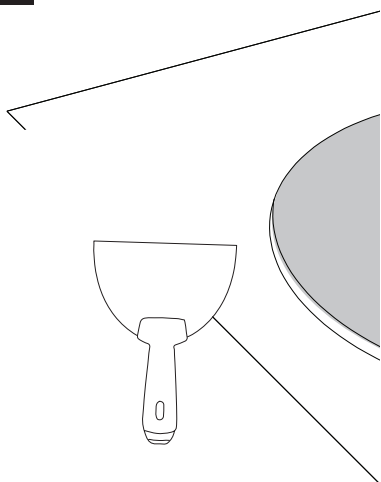


If desired, restore ceiling finish to seamlessly blend frame with ceiling

12.

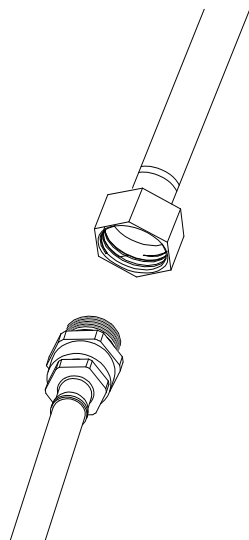

Connect hose to water supply connection

13.

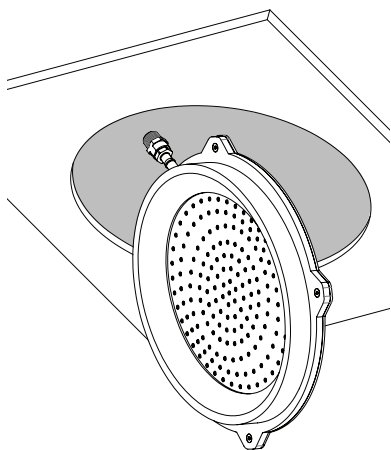

At an angle, insert and align internal  
assembly with frame and set into  
place

**ASPECT**<sup>™</sup>  
BY WATERSTONE

41180 Raintree Court  
Murrieta, CA 92562

[www.aspectfaucets.com](http://www.aspectfaucets.com)  
1-888-304-0660 • 951-304-0520