

ARGONAUT

WIDESPREAD LAVATORY FAUCETS

Model #:
AG210-3, AG210-4



BEFORE YOU BEGIN YOUR INSTALLATION:

1



Turn off water supply.

2



Observe all local
plumbing codes.

3




Inspect plumbing for signs of
damage. Replace as necessary.

4



DO NOT use petroleum based
products on this faucet.

REQUIRED TOOLS AND MATERIALS:




Adjustable Wrench

WARNING: Cancer and reproductive harm - see www.P65Warnings.ca.gov

IMPORTANT!


- Read these instructions and plan the installation before beginning.
- Risk of product damage. Do not apply direct heat to the valve. Excessive heat will damage the plastic components and plaster guard.
- A mixed water supply is required for this product.
- Component location, spacing, and situational requirements can vary.

1.

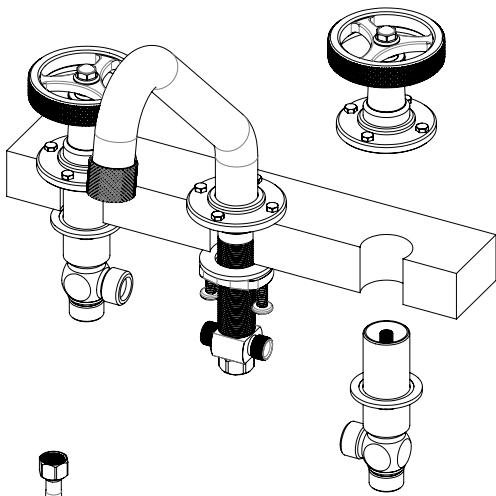


Insert Valve body up from beneath sink.

2.

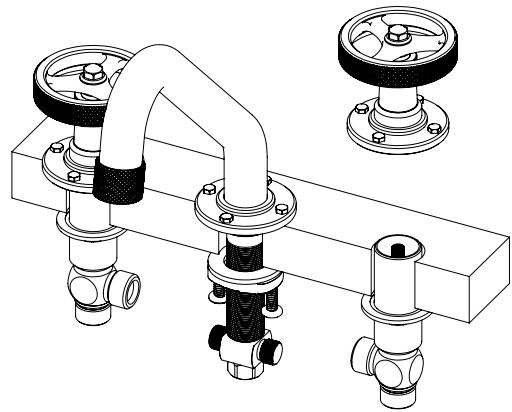

Thread Trim onto Valve Body.

3.

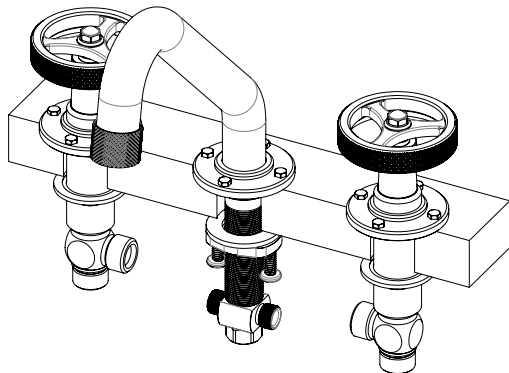

Connect Provided Hoses from valves to spout shank.

ASPECT[™]
BY WATERSTONE

1-888-304-0660 • 951-304-0520
www.aspectfaucets.com
AG210-3 AG210-4 - REV A